



# How We Install: Water Drain Fittings

Components Required:  
1 x URAO-067 Water Drain

1.

We locate the lowest point of the wrapped unit then...



5.

It is then aligned and place the water drain on top of the cut-out.



2.

...cut across (around 2cm long) at the lowest point of the unit.




6.

If there is sufficient space - we tape along the sides of the water drain, making sure not to shut the opening.



3.

We remove the double-sided tape from the water drain...

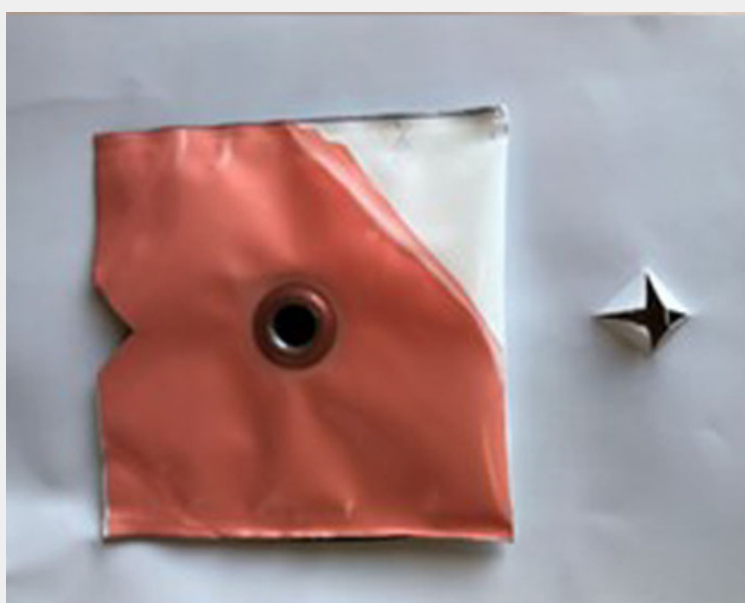

4.

...and ensure the water drain outlet with the 'V' cut-out is facing and sloping downwards.



**The Water Drain Fitting  
is complete.**